

# **Digital Gauge Instruction Manual**


★ Please pull out the insulation sheet before use (fig 1)

### **⇒** Button Functions

1. **Button "A"**  $\rightarrow$  Power/Change units (PSI $\rightarrow$ BAR $\rightarrow$ KG/CM<sup>2</sup>)


## **○**Operation Mode Start-Up


- 1. Manual start-up → Press **Button "A".**
- 2. Automatic start-up  $\rightarrow$  When pressure is above 5 psi the digital gauge will turn on automatically.

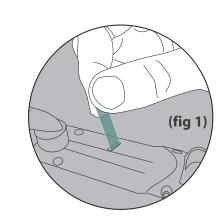

## **⇒** Battery Replacement


- 1 Unscrew the 4 screws that are on the back of the gauge base
- ②Lift out the gauge cap
- ③ Take out LCD digital gauge
- ④ Open battery cap and replace the new 3V battery(CR2032). Please note that the positive pole (+) should face towards the battery cap and be inserted correctly.
- ★ When the LCD digital gauge is defective, you may purchase a new LCD digital gauge from where you bought the pump. And follow the steps ① ② ③ above change the LCD digital gauge by yourself
- ⑤ Please make sure the O-ring in the bottom of the gauge is still there when replacing the battery and the LCD digital gauge

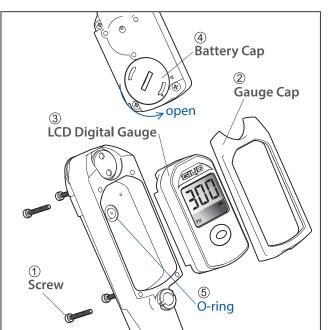

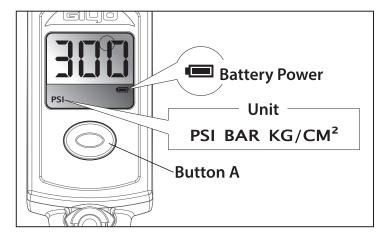

Trouble shooting

★ When it shows unusual digits, press constantly "Button A" for 9 seconds digits can be returned to zero "0" for resetting the system. (fig 2)

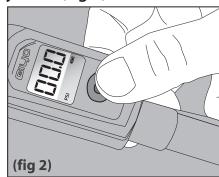

# **CAUTION**

- ★ Please use and keep away the product from places may contact with water.
- ★ Stay away from sharp objects.





