

Remove the Cutting Guide from the integrated seatpost.

Then, install the saddle onto the seatpost and rechecking the Target Saddle Height.





If the SADDLE HEIGHT is still lower than the target (or when you want to fine tune saddle height in the future), you should use the included ISP seat clamp spacers to add the saddle height.

There are three selections: 10mm (1pc), 5mm (1pc), and 3mm (2pcs).

## **!** CAUTION

If the end of the integrated seat post is not touching the base of the seat clamp structure, the integrated seatpost may break and result in a serious accident.

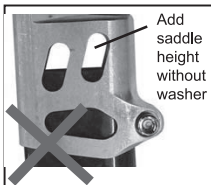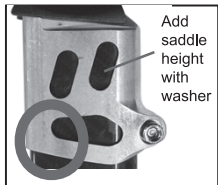

## **!** CAUTION


After adding the appropriate number of ISP spacers, make sure the ISP does not fall below the Minimum Insertion Mark. Otherwise the ISP may break and result in a serious accident.



After adding the washer, the ISP should always touch the base of the washer and is also over the Mini Insert Mark.

Tighten the saddle clamp bolt with a recommended torque to avoid the saddle from slipping down.

Recommended tightening torque: 26-35 in-lb (2.9-3.9Nm)  
For seat fixing bolt using a 13mm spanner, tighten to 160 in-lb (18.14 Nm)

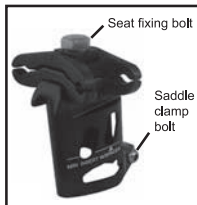

## **!** CAUTION

Do not grease the integrated seatpost or the inner side of the saddle clamping mechanism.