

|ENGLISH|


GIANT DROPPER POST CARTRIDGE

REPLACEMENT MANUAL


GIANT

DISMANTLING


1

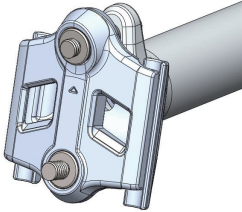


5mm

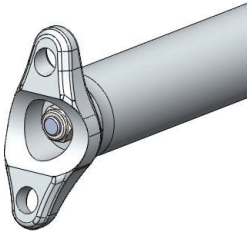


2

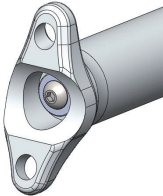


3mm

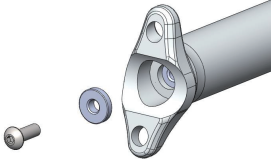


3

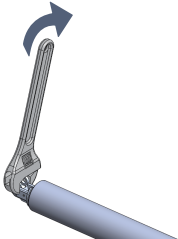


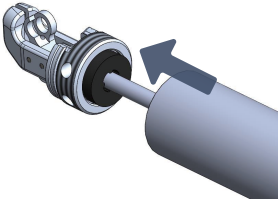


4

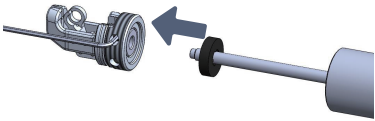

2mm

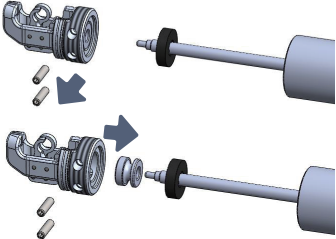


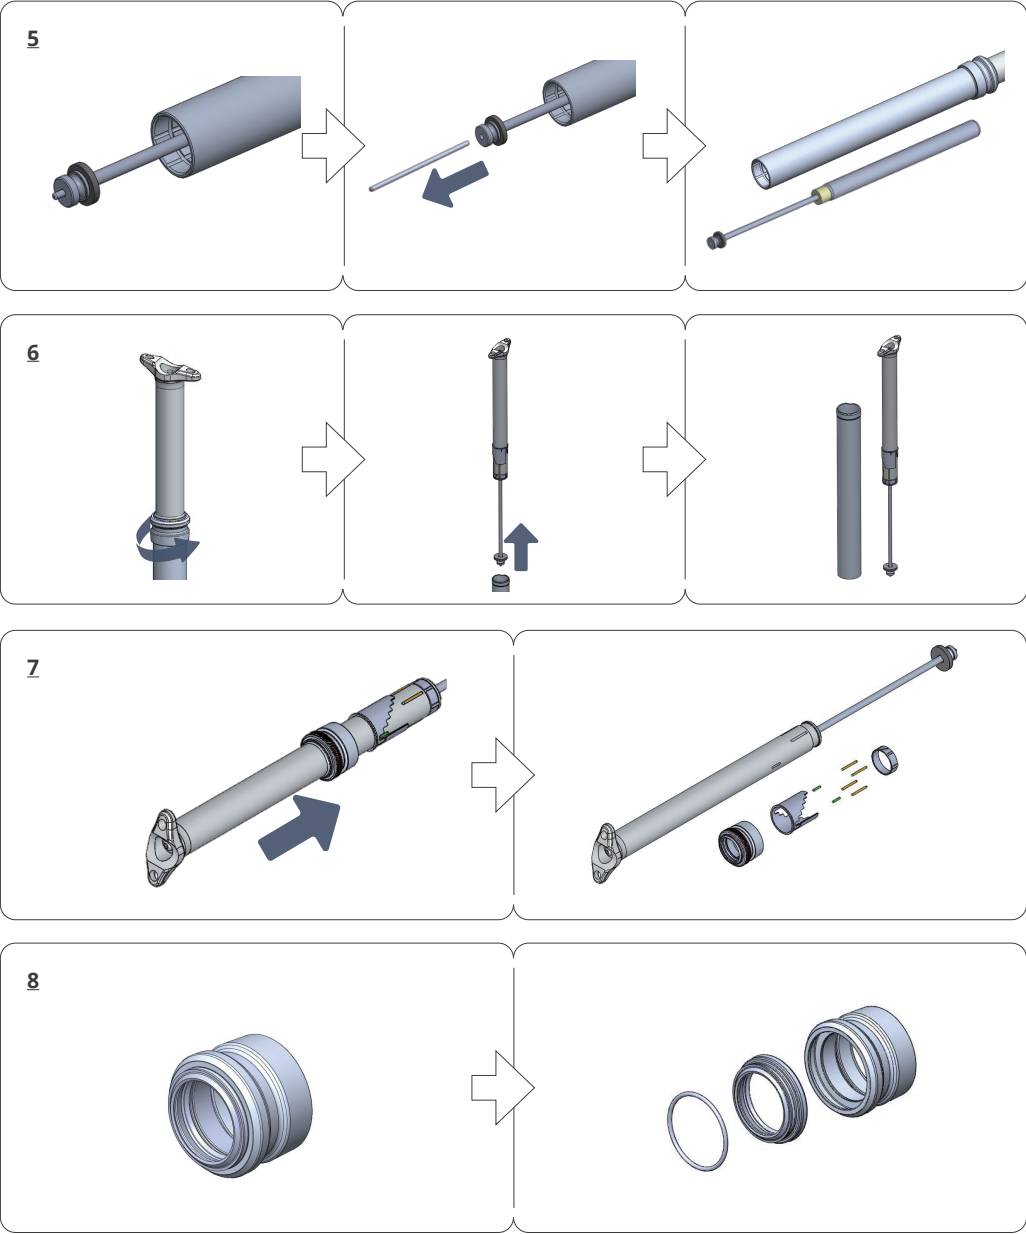


ASSEMBLY



1





Warning! Use ONLY Giant's supplied YSP-LUBE Lubricant for optimal function

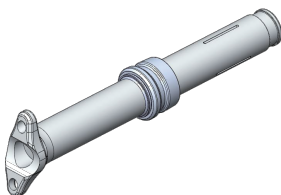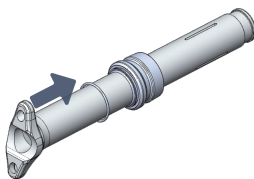

2

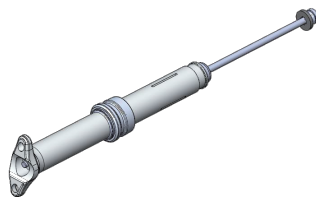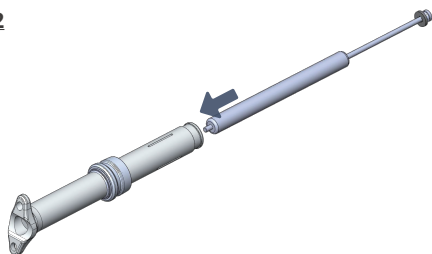


3

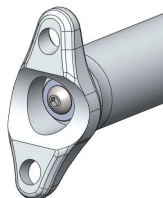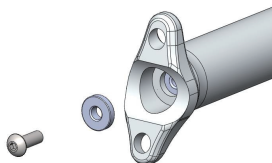


3mm 4 N.m / 40 kgf-cm

4

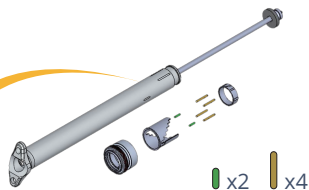


Warning! Use ONLY Giant's supplied YSP-LUBE Lubricant for optimal function

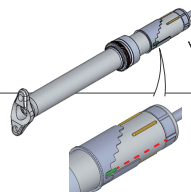


Align side key to the extruded part of the lower bushing.

Rear view



The notch of lower bushing should face back.


5

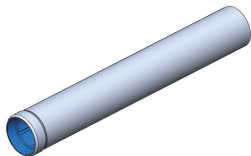



Warning! Use ONLY Giant's supplied YSP-LUBE Lubricant for optimal function





Align with side groove inside the tube.

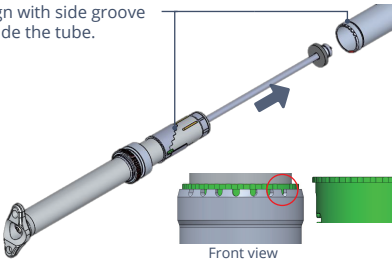




6

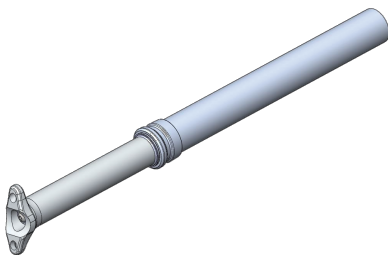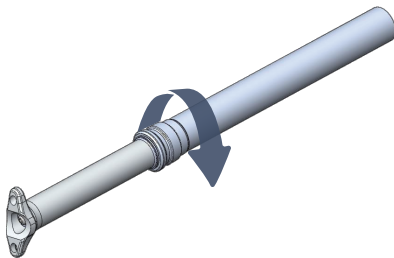

7

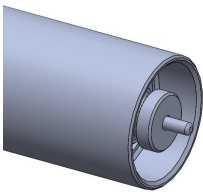
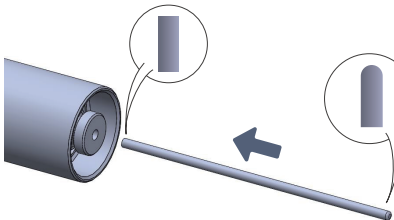


8

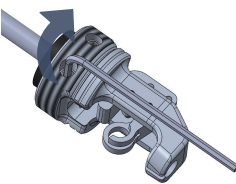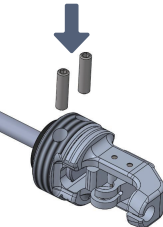
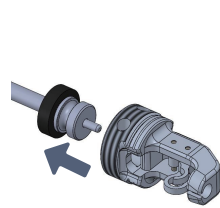


2mm
1.5 N.m / 15 kgf-cm

9

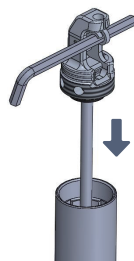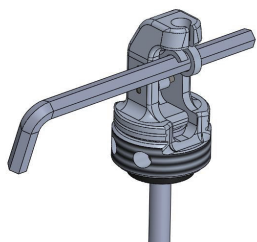

10

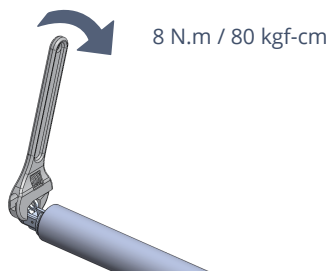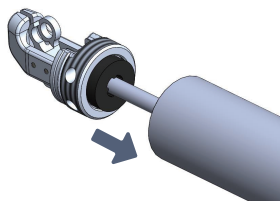

11

