

Before you ride or train with your new Cyclotron trainer for the first time, all of us at GIANT strongly encourage you to read this manual. In return for the time spent reading this manual and learning about your new Cyclotron trainer you will be rewarded with many hours of safe training.


IMPORTANT!

If a minor will be riding a bicycle attached to this trainer, it is essential that a responsible adult/parent read and explain this owner's manual to the minor.

Like anything else in life – and particularly in sporting activities, bicycling/training involves risk. The risk is that riding a bicycle or training upon one may lead to injury or death. By choosing to ride a bicycle with or without a trainer, you assume the responsibility for that risk. Not the people who sold you the trainer. Not the people that made it. Not the people that distribute it. It's all about you!

If you have questions that are not answered by this manual, or cannot be answered by your GIANT dealer, please contact GIANT directly: Toll Free: 1-800-US-GIANT – or – www.giantbicycle.com

GENERAL WARNING:

Consult your doctor before beginning any exercise routine or before using any fitness product, including the Cyclotron product. **STOP RIDING THE TRAINER** if at anytime you feel light-headed, nauseous, or dizzy during your workout. Keep children, pets, and property a safe distance away from your trainer while it is in use. The rear wheel of your bicycle will be spinning at a high speed. Make sure that your bicycle is properly installed and secured into the trainer before riding. Always use the trainer on a flat, dry surface.

OWNER'S MANUAL




Treat your trainer with common sense and respect. Store your trainer indoors away from temperature extremes. Keep your trainer out of the rain. Extend the life of your trainer by wiping off any sweat that may have fallen on the trainer during your workout – sweat is corrosive.

IMPORTANT :

- Read and follow all instructions carefully before use.
- Keep this manual close at hand at all times – do not discard.
- Before each use, inspect the bicycle and trainer thoroughly for loose, worn, or missing parts.


CAUTION

Cyclotron Auto and Cyclotron Mag Resistance Units **GET HOT** during normal use. **DO NOT TOUCH** the Drive Roller or other parts of the resistance unit during use or before it has had a chance to cool down after you have completed your workout. The Wheel Adjustment Knob under the Resistance Unit is designed to withstand heat build-up and is safe to touch. **DO NOT OPEN** the Resistance Unit or housing **EVER!** These resistance units are serviceable only at the factory, and you will invalidate your warranty coverage if you attempt to disassemble your Cyclotron Resistance Unit.

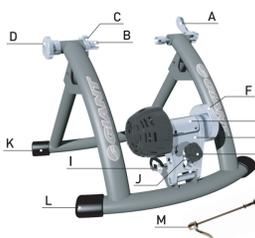

- A. Quick Release Lever
- B. Coupling
- C. Lock Ring
- D. Coupling Knob
- E. Drive Roller
- F. Flywheel
- G. Wheel Adjustment Knob
- H. Resistance Unit
- I. Frame Attachment Stay for Resistance Unit Mounting
- J. Linkage Pillar for Resistance Unit and Frame Attachment Stay
- K. Rubber Footpads (Round Shaped)
- L. Rubber Footpads (Oval Shaped)
- M. Quick Release Skewer

GIANT CYCLOTRON AUTO TRAINER SET-UP


1. Unfold the Giant Cyclotron Trainer and place it on a flat surface or a level floor. The rubber leveling footpads can be rotated and accommodate various heights in order to make your trainer stand flat on an uneven surface.



2. Replace the quick-release skewer on the rear wheel of your bike with the Quick-Release Skewer "M" included with the trainer. This assures ideal clamp fitting and stability.




3. The Linkage Pillar "J" is controlled by the Wheel Adjustment Knob "G". Try to move linkage pillar from frame attachment stay tracking location (a) to (b) until it's locked.



4. Adjust the position of Resistance Unit "H" by turning the Wheel Adjustment Knob "G" counter-clockwise until the Drive Roller "E" of Resistance Unit is back as far as possible from the frame of trainer.



The Resistance Unit is connected with Linkage Pillar by the screw of Wheel Adjustment Knob. Please keep enough thread length inside Linkage Pillar.

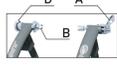

5. Before placing the bike in the trainer, adjust the right side Coupling Knob "D" and Quick Release Lever "A" on the left side to create a wide clearance between the Couplings "B".



6. Place the bike's rear hub [outside width of Quick-Release Skewer] between the Couplings "B" and adjust the Coupling Knob "D" until the bike's rear tire is centered on the Drive Roller "E" of the Magnetic Resistance Unit, then lock the hub by pressing down the Quick Release Lever "A" – the Quick Release Lever should be able to close without excessive force, and without visibly deforming the trainer's frame.



7. Rotate the Lock Nut "C" to fix Coupling Knob "D" in its secured position. Tighten until securely fastened, **BUT DO NOT OVERTIGHTEN.**



8. Before proceeding make sure that the rear tire of the bike is properly inflated. Check the sidewall of the tire for the manufacturer's recommended pressure range, and inflate accordingly. Using the Adjustment Knob "G" set the Magnetic Resistance Unit "H" so that the roller contacts the bike's rear tire. Then turn the Adjustment Knob "G" clockwise two full turns to insure that you have sufficient pressure of the Drive Roller "E" on the rear tire.

TIRE INFLATION :

All tires lose air pressure over time. Keeping the tires pressurized properly is necessary for the safe operation of your bicycle and trainer. Use a hand or foot operated pump to inflate tires to the recommended pressure which is molded on the sidewall of the tires. Check tires for cuts and wear. Do not over or under inflate your tires. Use a tire pressure gauge to check for proper inflation.


WARNING !

Never inflate a tire beyond the maximum pressure marked on the tire's sidewall. Exceeding this pressure may cause the tire to blow off the rim, causing you to lose control and/or damage your bicycle and trainer, which may result in serious injury.

TIRE INSPECTION :

Inspect your tires regularly for tread wear, cuts, and punctures. Replace your tires if there is little or no tread remaining, and if there is any cuts or damage. Also, check to see that each tire is seated properly on the rim and there are no bulges or defects.




- A. Quick Release Lever
- B. Coupling
- C. Lock Ring
- D. Coupling Knob
- E. Drive Roller
- F. Control Clamp
- G. Wheel Adjustment Knob
- H. Resistance Unit
- I. Adjustment Knob
- M. Quick Release Skewer

GIANT CYCLOTRON MAG TRAINER SET-UP


1. Unfold the Giant Cyclotron Trainer and place it on a flat surface or a level floor. The rubber leveling footpads can be rotated to accommodate various heights in order to make your trainer stand flat/level on an uneven surface.



2. Replace the quick-release skewer on the rear wheel of your bike with the Quick-Release Skewer "M" included with the trainer. This assures ideal clamp fitting and stability.

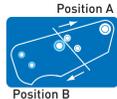

3. The Giant Cyclotron Mag trainer provides two resistance unit mounting locations to accommodate various wheel diameters. Before installing the resistance unit, check the wheel size of your bicycle and install the resistance unit as indicated on the side of the mounting bracket. There are two sets of three holes. The mag mounts in the large forward holes and the adjustment bracket mounts in the rear two holes.

Wheel Size	Suggestion Install Position
24" x 1	A
24" x 2.35	B
26" x 1	A
26" x 2.35	A
27" x 1 1/4	B
27" x 1 3/8	B
650 x 25C	A
700 x 25C	B
700 x 50C	B



4. Assemble the Wheel Adjustment Knob "G" counter supporter as show in the diagram. Align the head of the bolts to fit into the supporter in the frame attachment stay, then tighten the bolts and nuts.



5. Adjust the position of Resistance Unit "H" by turning the Wheel Adjustment Knob "G" counter-clockwise until the driver Roller "E" of Resistance units is fully backed away from the frame of trainer.



6. Before placing the bike in the trainer, adjust the right side Coupling Knob "D" and Quick Release Lever "A" on the left side to create a wide clearance between the couplings.



7. Place the bike's rear hub [outside width of Quick-Release Skewer] between the couplings and adjust the Coupling Knob "D" until the bike's rear tire is centered on the roller of the Magnetic Resistance Unit, then lock the hub by pressing down the Quick Release Lever "A" – the Quick Release Lever should be able to close without excessive force , and without visibly deforming the trainer's frame.



8. Rotate the Lock Nut "C" to fix Coupling Knob "D". Tighten until securely fastened, **BUT DO NOT OVERTIGHTEN.**



9. Before proceeding make sure that the rear tire of the bike is properly inflated. Check the sidewall of the tire for the manufacturer's recommended pressure range, and inflate accordingly. Using the Adjustment Knob "G" set the Magnetic Resistance Unit "H" so that the roller contacts the bike's rear tire. Then turn the Adjustment Knob "G" clockwise two full turns to insure that you have sufficient pressure on the rear tire.

10. Place the proper black rubber shims either **F1, F2, F3 or F4** in Control Clamp "F" to fit your diameter size of handlebar. Install the Control Clamp on the handle bar and tighten the nut "I" securely.

There are 4 sets of black rubber shims included with this trainer



- F1 is suitable for 31.8mm diameter handlebars.
- F2 is suitable for 26.0mm diameter handlebars.
- F3 is suitable for 25.4mm diameter handlebars.
- F4 is suitable for 22.2mm diameter handlebars.

TIRE INFLATION :

All tires lose air pressure over time. Keeping the tires pressurized properly is necessary for the safe operation of your bicycle and trainer. Use a hand or foot operated pump to inflate tires to the recommended pressure which is molded on the sidewall of the tires. Check tires for cuts and wear. Do not over or under inflate your tires. Use a tire pressure gauge to check for proper inflation.

WARNING !

Never inflate a tire beyond the maximum pressure marked on the tire's sidewall. Exceeding this pressure may cause the tire to blow off the rim, causing you to lose control and/or damage your bicycle and trainer, which may result in serious injury.

TIRE INSPECTION :

Inspect your tires regularly for tread wear, cuts, and punctures. Replace your tires if there is little or no tread remaining, and if there is any cuts or damage. Also, check to see that each tire is seated properly on the rim and there are no bulges or defects.

Removing your bike from the trainer

1. To begin, rotate the Adjustment Knob "G" counter-clockwise until the drive roller is free from the bicycle tire.
2. Then pull the Quick Release Lever "A" up and remove the bicycle from the trainer.



The pedaling resistance level of Giant Cyclotron Auto Trainer will be adjusted automatically by your cadence and wheel speed.



▶ To increase the pedaling resistance, turn the lever on Control Clamp "F" toward the "H" symbol.

▶ To decrease the pedaling resistance, turn the lever on the Control Clamp "F" toward the "L" symbol. The lowest setting is **NOT** zero resistance; there is still a small amount of resistance.

Enjoying the Ride.
Effective Training Instructions and Solutions :

- Effective Training requires some load resistance. Gradually increasing the resistance is better for your muscles and a more effective form of training.
- By manipulating the resistance setting (Mag) and your bicycle gears, you can achieve your preferred level of resistance.
- For best results, it is important to maintain a consistent cadence through any changes in the resistance setting.
- Proper footwear is essential for a safe, enjoyable, and productive training experience. Do not train barefoot or in sandals. Proper cycling footwear should either have a soft rubber sole for use with platform pedals, or the proper bolt pattern and cleat for compatibility with binding-type pedal systems.
- Stiff soled cycling specific shoes help to prevent fatigue and increase power transfer to the pedals.
- Giant padded cycling gloves can reduce hand fatigue and absorb sweat.
- Giant G-Thang™ sweat-catcher and training area free from sweat and its corrosive effects.
- Giant Matt™ training mat provides a padded, no-skid, no floor-marring training protection for the entire training area.

- Giant Chopping Block™ securely elevates the front wheel of the bicycle for a near-to-natural bicycle position.

STORAGE :

Store your trainer indoors away from temperature extremes. Keep your trainer out of the rain. Extend the life of your trainer by wiping off any sweat that may have fallen on the trainer during your workout – sweat is corrosive.


CAUTION

- Open the legs fully to get maximum stability.
- **DO NOT TOUCH** the spinning Drive Roller and bicycle wheel at any time!
- Cyclotron Auto and Cyclotron Mag Magnetic Resistance Units "H" **GET HOT** during normal use. **DO NOT TOUCH** the Drive Roller or other parts of the resistance unit during use or before it has had a chance to cool down after you have completed your workout.
- Keep both hands on the handlebars at all times and maintain a normal riding position.
- Check the couplings "B" between the rear hub for damage and cracks.
- Keep small children, pets, and property a safe distance away from the trainer/bicycle while it is in use.
- Make sure all bolts and nuts are securely fastened prior to using.
- Never brake suddenly while using the trainer. This results in unnecessary wear and tear to the rear tire.
- Always use the trainer on a flat, dry surface.

GIANT WARRANTY

Giant warrants for the original purchaser the Giant Cyclotron Mag Trainer to be free from defects in material and workmanship for the following specified periods:

- Warranty of lifetime for trainer frame and resistant unit.
- Warranty of 1 year for the electronic parts.

LIMITED REMEDY

Unless otherwise provided, the sole remedy under the above warranty, or any implied warranty, is limited to the replacement of defective products with those of equal or greater value at the sole discretion of Giant. This warranty extends from the date of purchase, applies only to the original purchaser, and is not transferable. In no event shall Giant be responsible for any direct, incidental or consequential damages, including, without limitation, damages for personal injury, property damage, or economic losses, whether base on contract, warranty, negligence, product liability, or any other theory.

EXCLUSIONS

1. Normal wear and tear on parts.
2. Modifications from the original condition.
3. Use of the product for the abnormal, competition and/or commercial activities or for purposes other than those for which the product was designed.
4. Damage caused by falling to follow the product user manual/instruction.
5. Paint finish and decal damage.
6. Labor charges for part replacement or changeover.

Giant makes no other warranties, express or implied. All implied warranties, including the warranties of merchantability and fitness for a particular purpose are limited in duration to that of the express warranties stated above. Some states/countries of regulation do not allow the exclusion or limitation of damages; the above limitation or exclusion may not apply to you.

Any claim against this warranty must be made through an Authorized Giant Retailer or distributor. Proof of purchase is required. Claim made outside the country of purchase may be subject to fees and additional restrictions. The subject item must be registered with Giant, by the purchase receipt or other proof of the date of purchase before a warranty claim may be processed. Warranty duration and details may differ by frame type and/or by country. This warranty gives you specific legal rights, and those rights may vary from place to place. This warranty does not affect your statutory rights.

EXCEPTION

According to the EU Product Warranty Directive, consumer goods sold in the EU are warranted for a period of 2 years from the original date of purchase. Giant will follow the EU product Warranty Directive to provide a 2 year warranty for countries in the EU.